

# CT-4010 4CH. CHASE CONTROLLER

## OPERATION MANUAL


### PRODUCT DESCRIPTION:

This model is a 4 CH. chase controller, has 16 pre-set chasing patterns and AUTO/MANUAL/MUSIC/FULL ON/STAND-BY mode, chasing speed and audio level can be adjusted.

### TECHNICAL SPECIFICATIONS:


POWER INPUT .....	AC 230V~50Hz
EXTERNAL INPUT .....	AC12-230V, 16A
CHANNEL OUTPUT .....	0.05A-5A per channel, Total 16A
FUSE (internal).....	F0.5A 250V 5x20mm
CHANNEL FUSE .....	F6.3A 250V 5x20mm
DIMENSIONS .....	482x136x60mm
WEIGHT .....	1.8Kg

### CONTROLS & FUNCTIONS

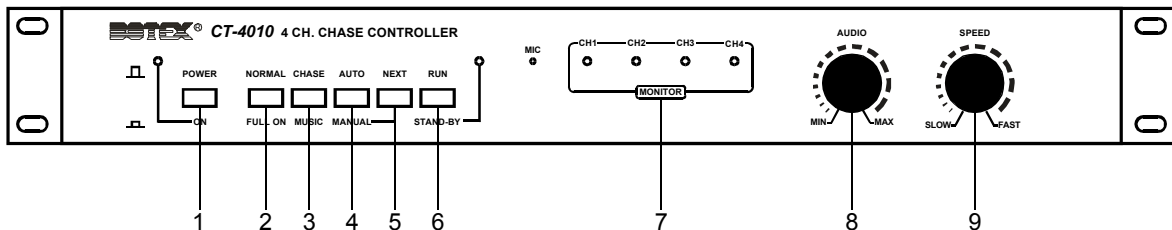

1. **POWER SWITCH**
2. **FULL ON / NORMAL BUTTON**  
Press the button to IN, it is in FULL ON mode;  
press the button to OUT, it is in NORMAL mode.
3. **CHASE / MUSIC BUTTON**  
Press the button to IN, the chase of program is triggered by music  
Press the button to OUT, the chase is controlled by auto speed
4. **MANUAL / AUTO BUTTON**  
Press the button to IN, MANUAL is activated.  
Press the button to OUT, AUTO is activated.
5. **NEXT BUTTON**  
The button is effective in manual mode, you can select program step by step.
6. **STAND-BY/RUN BUTTON**  
Press this button to IN, all output is paused unless FULL ON is activated ,  
Press this button to OUT, it resume NORMAL mode.
7. **CHANNEL OUTPUT LED**  
It is lit when corresponding channel is turned on.
8. **AUDIO LEVER CONTROL**  
This control adjusts the sensitivity of the music detected by the built-in microphone.
9. **SPEED CONTROL**  
This control adjusts the flash speed of strobe

To set up proper connection of external load, please refer to the wire diagram illustrated by right figure:

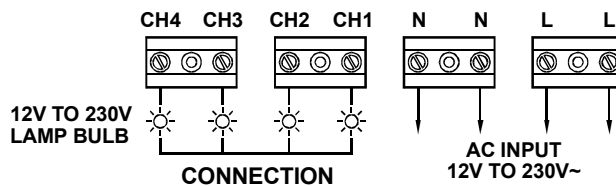

### WARNING:

1. **THIS APPARATUS MUST BE EARTHED.**
2. **DISCONNECT POWER CABLE BEFORE OPENING.**
3. **TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**
4. **REPLACE THE FUSE WITH THE SAME TYPE.**

