

MOVING HEAD WASH PRO 575- V2.6 Triton Blue

DMX channel's functions and their values (16 DMX channels):

Channel 1 - Color Wheel 1 :

0-15	Open / white
16-31	Color 1
32-47	Color 2
48-63	Color 3
64-79	Color 4
80-95	Color 5
96-111	Color 6
112-127	Color 7
128-189	Forwards rainbow effect from fast to slow
190-193	No rotation
194-255	Backwards rainbow effect from slow to fast

Channel 2 - Cyan Color Wheel :

0-255	Cyan (0-white, 255-100% Cyan)
-------	-------------------------------

Channel 3 - Magenta Color Wheel :

0-255	Magenta (0-white, 255-100% magenta)
-------	-------------------------------------

Channel 4 - Yellow Color Wheel 4 :

0-255	Yellow (0-white, 255-100% Yellow)
-------	-----------------------------------

Channel 5 - PAN movement 8bit :

Channel 6 - TILT movement 8bit :

Channel 7 - Speed pan/tilt movement

0-225	max to min speed
226-235	blackout by movement
236-245	blackout by all wheel changing
246-255	no function

Channel 8 - Effect wheel

0-70	Full beam
71-230	Beam shaper
231-255	Frost filter

Channel 9 - Zoom

0-255	Zoom 28 - Zoom 7
-------	------------------

Channel 10 - Shutter, strobe

0-31	Shutter closed
32-63	No function (shutter open)
64-95	Strobe effect slow to fast
96-127	No function (shutter open)
128-159	Pulse effect in sequences
160-191	No function (shutter open)
192-223	Random strobe effect slow to fast
224-255	No function (shutter open)

Channel 11 – Dimmer intensity

0-255 Intensity 0 to 100%

Channel 12 - Speed Of CMY And Dimmer :

0-255 Speed Max →Min

Channel 13 - Colour macros - CMY and colour wheel

0-7	Off	128-135	Macro16
8-15	Macro1	136-143	Macro17
16-23	Macro2	144-151	Macro18
24-31	Macro3	152-159	Macro19
32-39	Macro4	160-167	Macro20
40-47	Macro5	168-175	Macro21
48-55	Macro6	176-183	Macro22
56-63	Macro7	184-191	Macro23
64-71	Macro8	192-199	Macro24
72-79	Macro9	200-207	Macro25
80-87	Macro10	208-215	Macro26
88-95	Macro11	216-223	Macro27
96-103	Macro12	224-231	Macro28
104-111	Macro13	232-239	Macro29
112-119	Macro14	240-247	Macro30
120-127	Macro15	248-255	Random CMY

Channel 14 – Lamp on/off, reset, internal programmes

0-19	colour change normal
20-39	colour change to any position
40-59	Lamp on
60-79	Lamp switch off
80-99	Motor reset
100-119	Internal program 1
120-139	Internal program 2
140-159	Internal program 3
160-179	Internal program 4
180-199	Internal program 5
200-219	Internal program 6
220-239	Internal program 7
240-255	Internal program 8

Channel 15 – Pan fine

Channel 16 – Tilt fine